


**OPERATION, MAINTENANCE & PARTS**  
For questions and/or concerns, please contact us:  
Dynamic Towing Equipment & Manufacturing  
1120 East Brambleton Avenue  
Norfolk, VA 23504

Office: 800-831-9299 or (757) 624-1360  
Fax: (757) 622 - 0028

# 2014-2018 CURRENT DYNAMIC 19' & 21' ROLLBACK OWNERS MANUAL


\*\*\*All Dynamic Carriers Use Dexron 3 or ATF4 Transmission Fluid



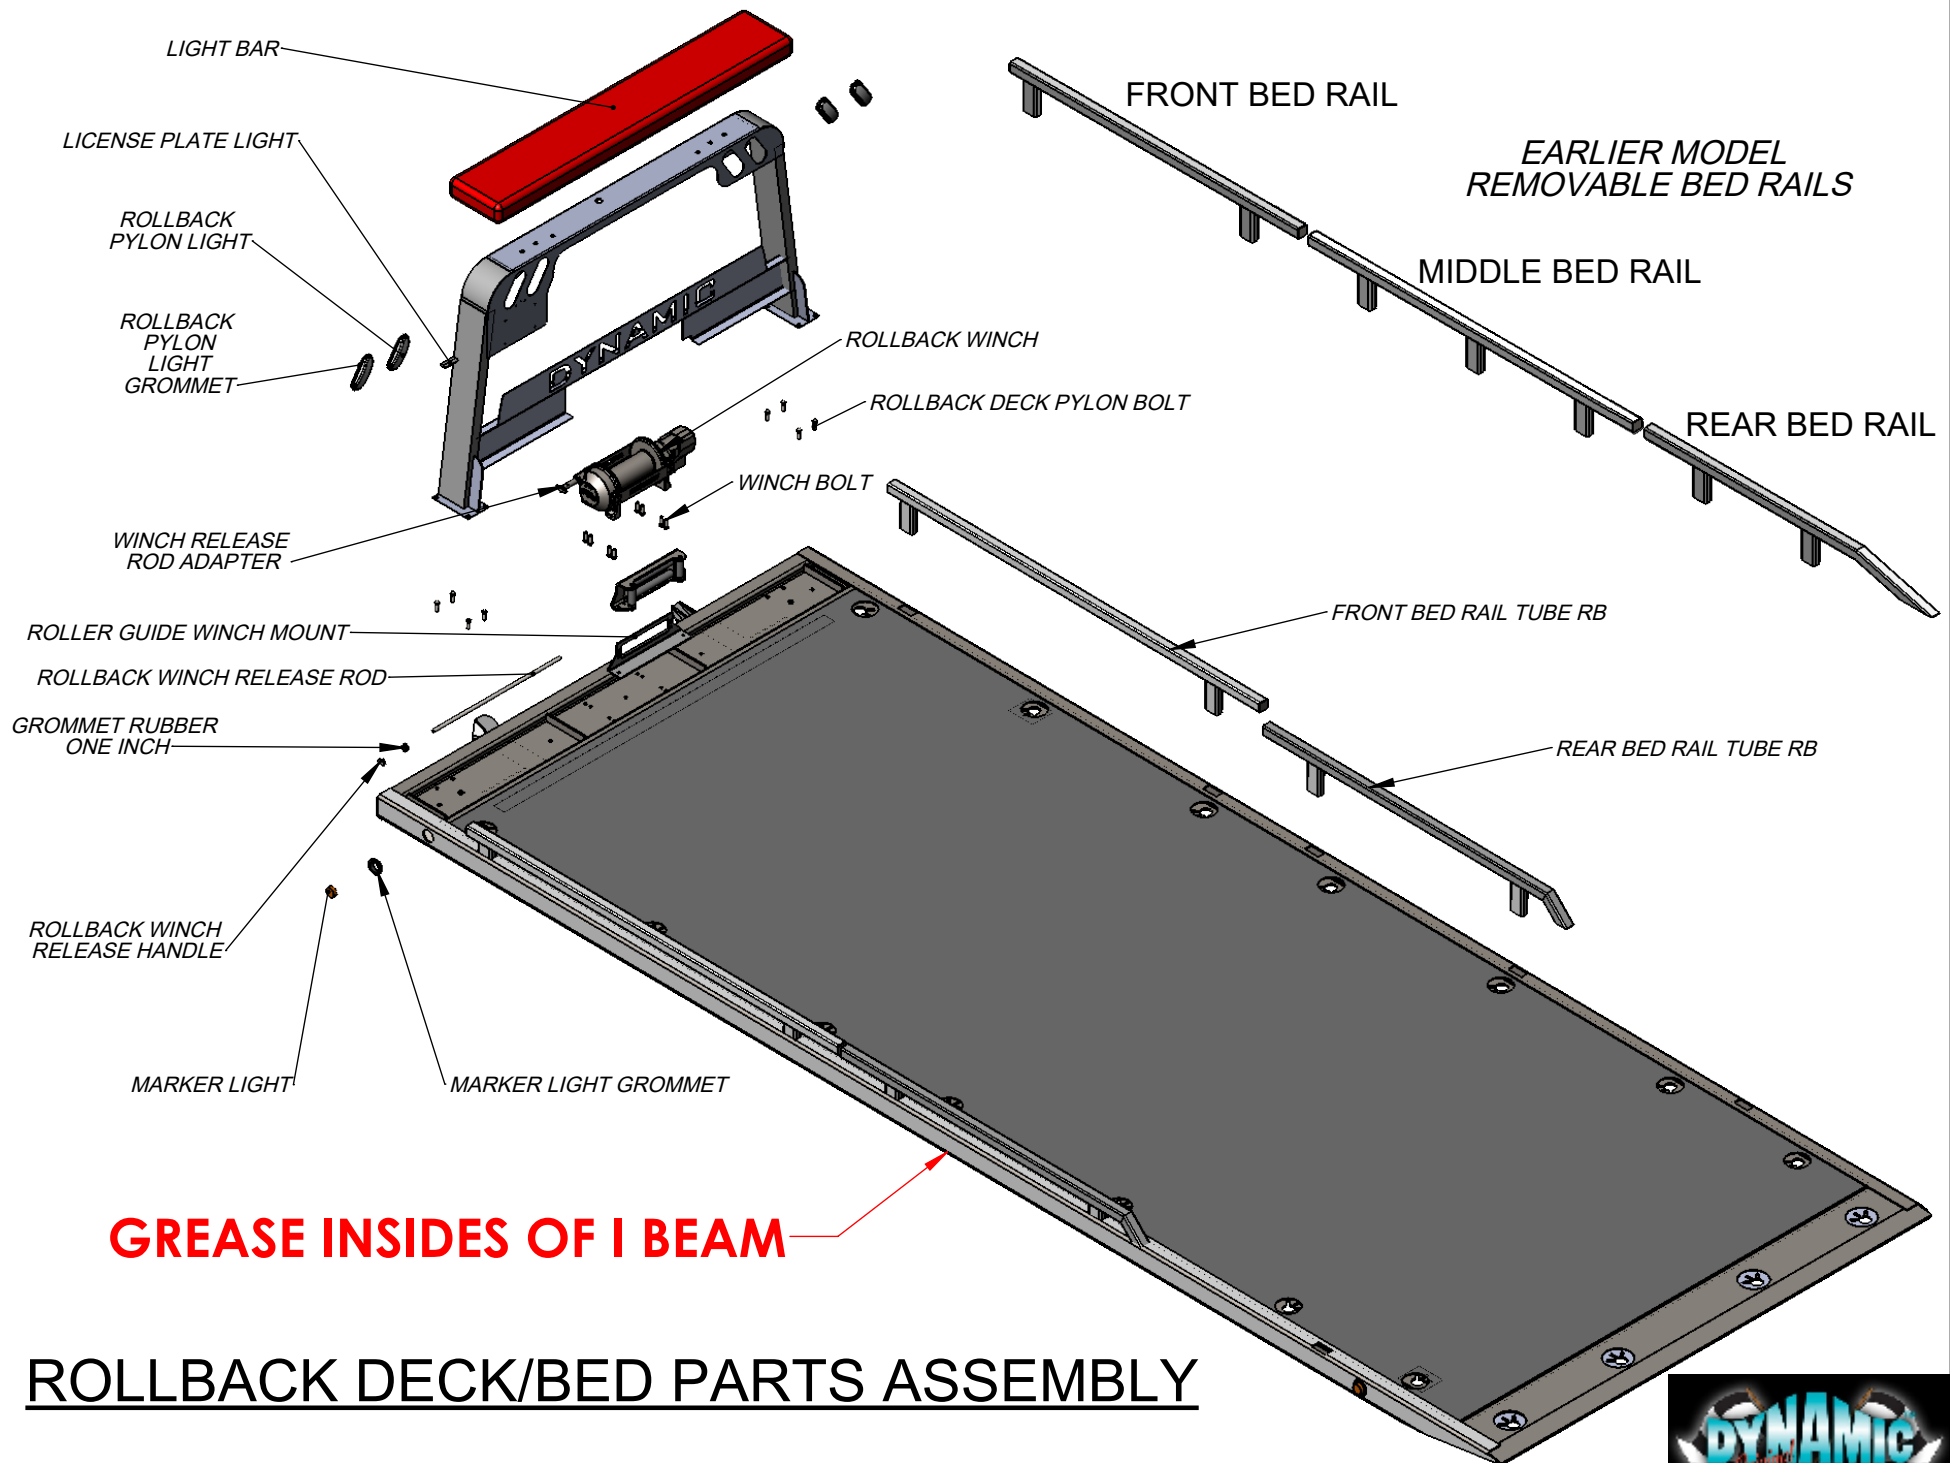

## ROLLBACK DECK/BED PARTS ASSEMBLY



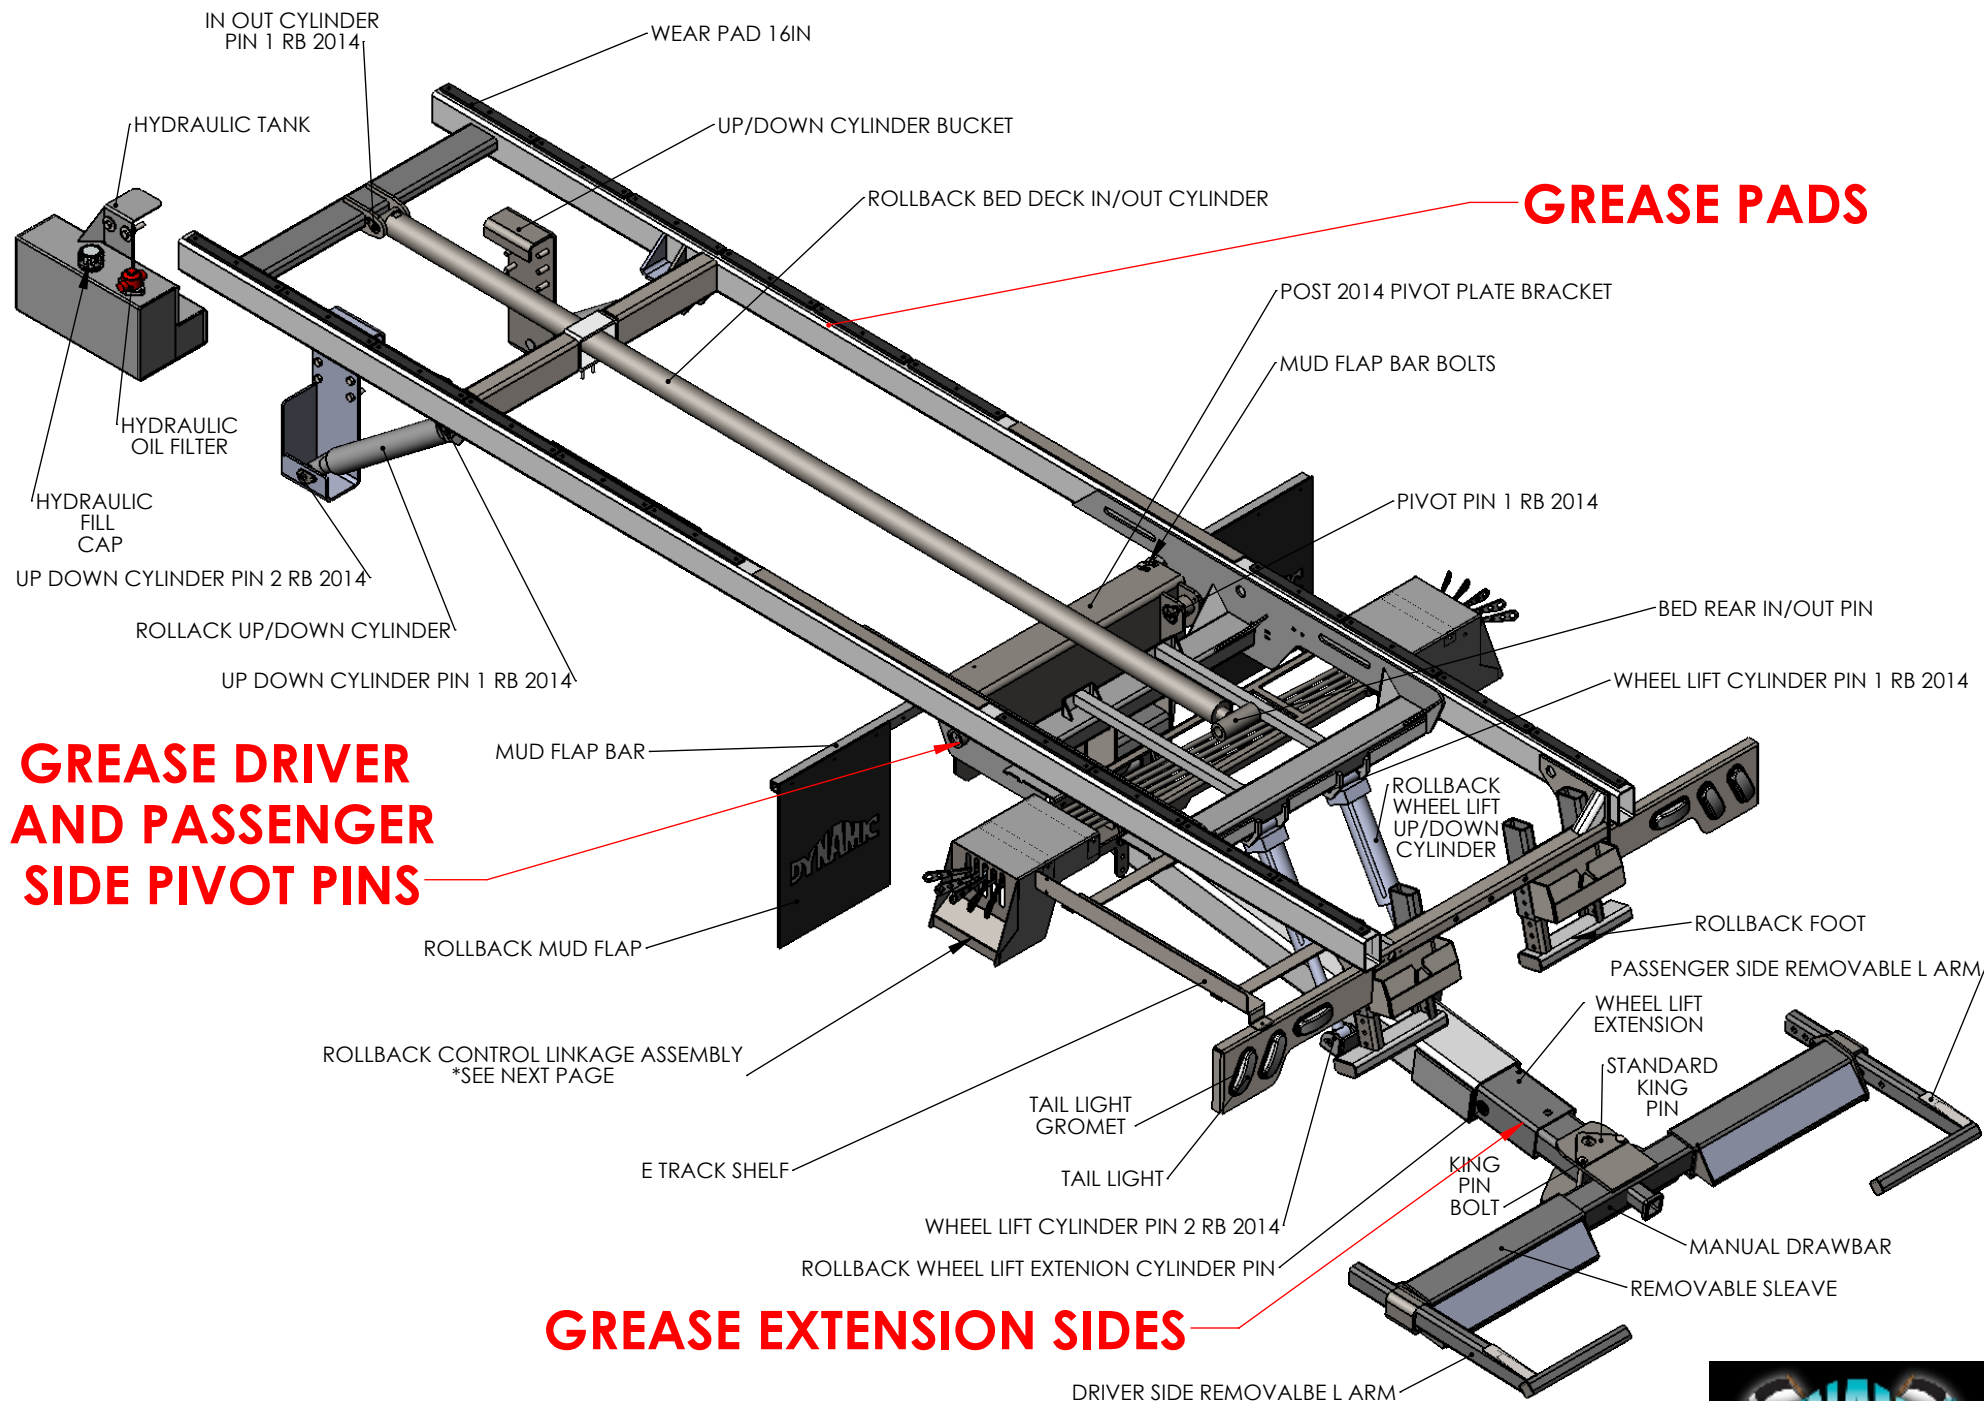

## ROLLBACK SUBFRAME PARTS ASSEMBLY



# ROLLBACK CONTROL LINKAGE ASSEMBLY

VALVE BODY  
MOUNTING  
BOLT & NUT

LINKAGE BOLT  
LEVER BOLT

LINKAGE BOLT  
LEVER NUT

HANDLE JAM NUT

HD11 5 SECTION VALVE

DETAIL A  
SCALE 1 : 4

HD11  
LEVER  
BOX

HD11 PRESSURE RELIEF VALVE

**OIL LINKAGE**

RB 5 SECTION  
VALVE COVER

B

LINKAGE  
ROD

END  
HANDLE 2ND  
HANDLE

STRAIGHT  
HANDLE

2ND  
HANDLE

END  
HANDLE

LINKAGE  
ROCKER  
SPACER

LINKAGE  
ROCKER

LINKAGE ROCKER  
PIVOT ROD

ROLL PIN


LINKAGE ROCKER  
-BOLT  
-(2) LOCK NUTS

HEIM  
JOINT

JAM NUT

DETAIL B  
SCALE 1 : 4



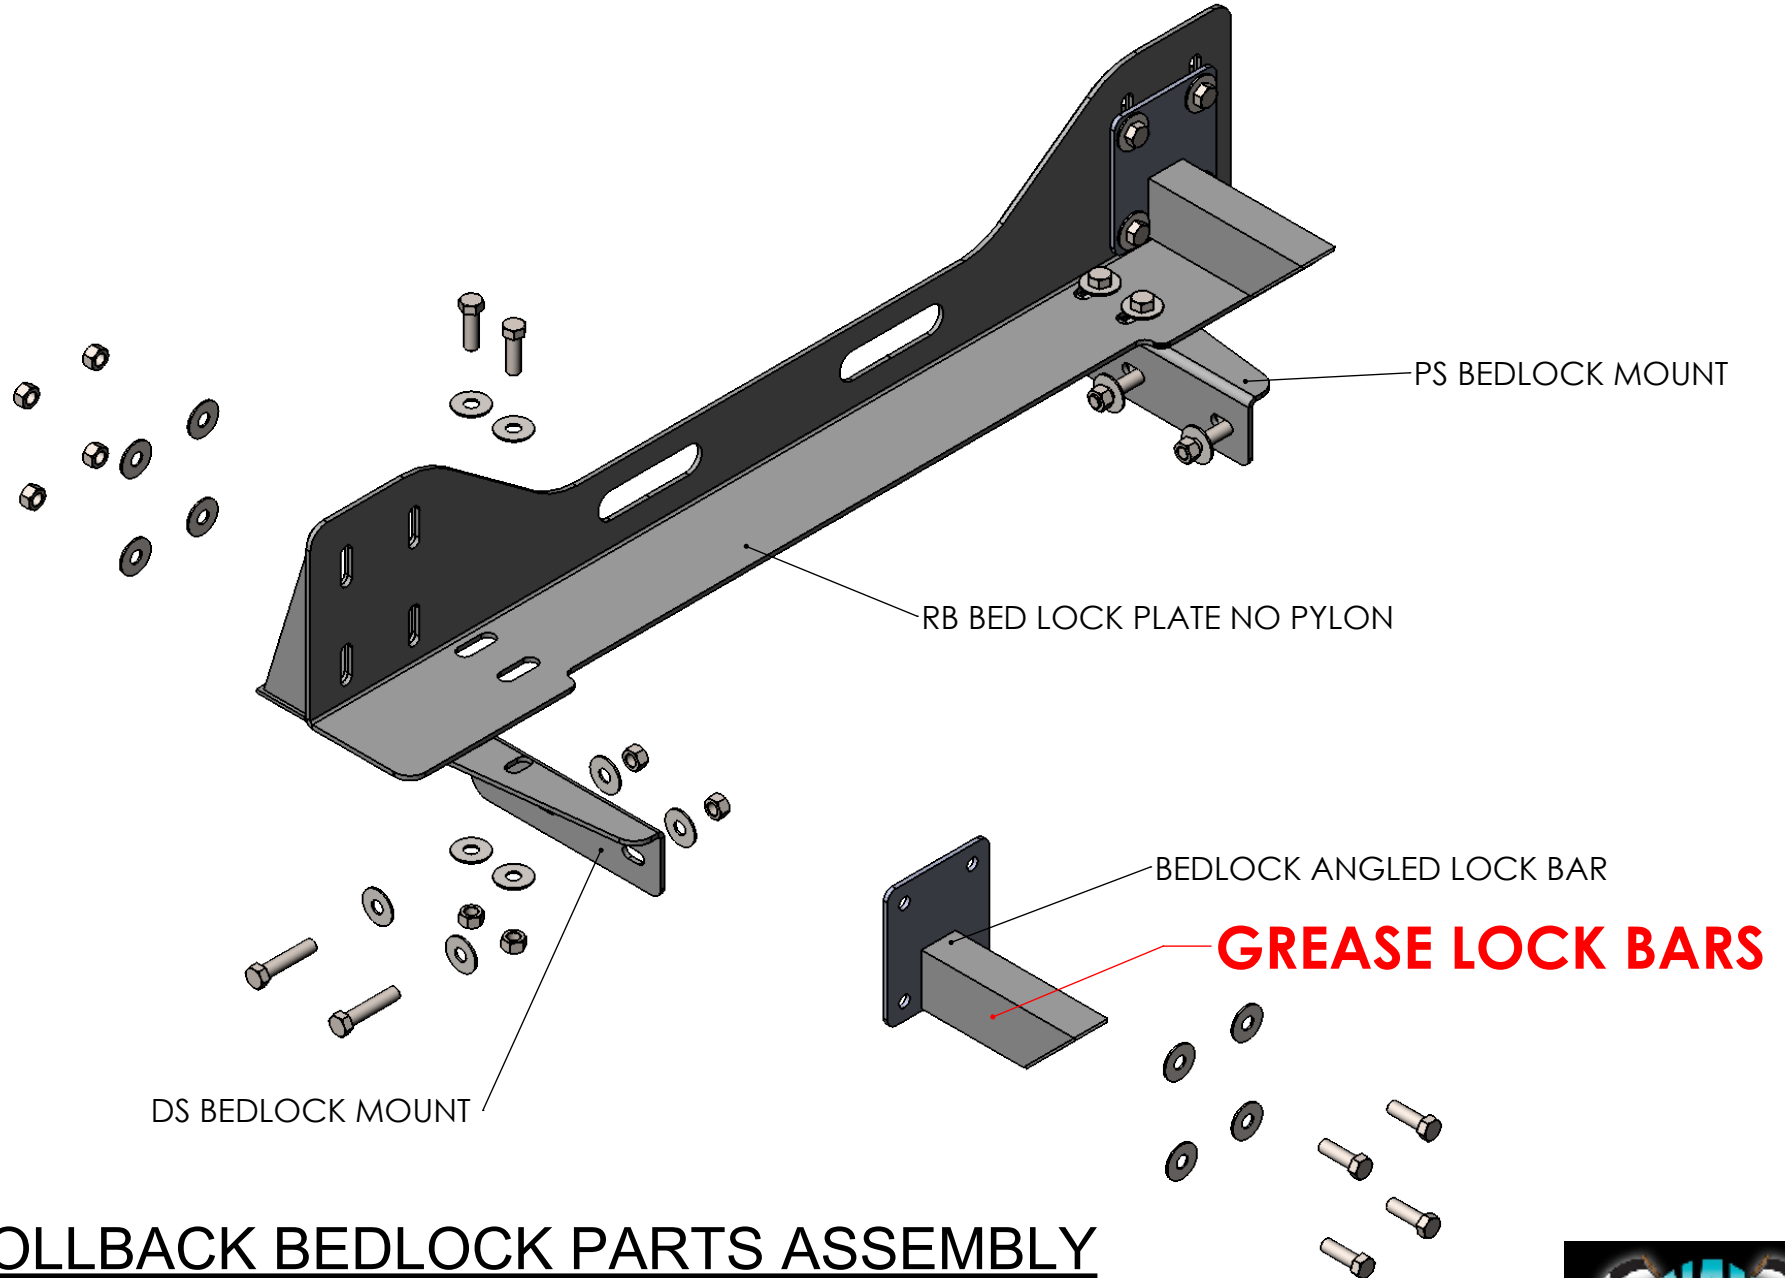

## ROLLBACK BEDLOCK PARTS ASSEMBLY



